



FACTORY DEFAULT SETTINGS

Updated December 2020

DVD PLAYERS and DVD RECEIVERS

Model	Default Settings	Purpose	Procedure
L53	Tuner/receiver settings	Resets to factory defaults	Set the unit to FM, then on the front panel, press quickly the following: "PLAY/PAUSE, then "STOP/OPEN"**, then press and hold the "DISPLAY" button for 5-7 seconds. Unit will shut off after reset.
** For L54 : Set to AM mode. "PLAY/PAUSE" then "STOP/OPEN" then press and hold "DISPLAY" for more than 7 seconds			
** For L73 : Set to FM mode. "PLAY/PAUSE" then "STOP" then press and hold "DISPLAY" for more than 7 seconds			
L70	Tuner/receiver settings	Clears presets and receiver settings	Set the unit to FM then on the front panel, press quickly the following: "PLAY/PAUSE" then "STOP", then press and hold the "FM/AM" button for 7 seconds. Unit will shut off after reset.
	DVD Player Functions	Resets to factory defaults	In OSD menu select "SYSTEM" then Defaults, select RESET, factory default password is 2580.
Viso 2 Viso 5	Factory Reset		<ol style="list-style-type: none"> 1. Place the unit into AM mode. 2. Press quickly the three front panel buttons; [PLAY/PAUSE] then [STOP] then [DISPLAY], holding the [DISPLAY] button for more than 9 seconds. 3. The unit will switch itself off then back on to DVD mode.
T512 T531 T532	Factory Reset	Resets to factory defaults	<ol style="list-style-type: none"> 1. Take out any discs from the tray and put unit into STANDBY. 2. Power up unit and wait for the "NO DISC" message on screen. 3. Press the "SETUP" button on the remote. 4. Press the down cursor button on the remote and go to the "TV ASPECT" menu. 5. Press the right cursor button on the remote to select 16:9 (check that the mark is beside the 16:9 should be highlighted at this point). 6. Using the remote control type in the following sequence of buttons, with a 1 second delay between button presses: 1,3,9,7,1,3,9, enter. 7. A blue screen will show up on the screen with system information. This is the service mode screen. 8. Please turn the unit off to complete the reset procedure.



FACTORY DEFAULT SETTINGS

Updated December 2020

DVD PLAYERS and DVD RECEIVERS

Model	Default Settings	Purpose	Procedure
T513 T533 T534 T515	Factory Reset	Resets to factory defaults	<p>Ensure HDMI switch at the back of unit is set to OFF"(only applies to the T534)</p> <ol style="list-style-type: none"> 1. Remove any discs from the tray and put unit into STANDBY. 2. Power up unit and wait for the "NO DISC" message on screen. 3. Press the "SETUP" button on the remote. 4. Press the down cursor button on the remote once to go to the DISPLAY menu. 5. Press the right cursor button on the remote twice to go to the TV ASPECT submenu. 6. Using the up/down cursor buttons on the remote select 16:9 (make sure the check mark is beside 16:9) 7. Using the remote control type in the following sequence of buttons quickly:1,3,9,7,1,3,9,ENTER. 8. A blue screen will show up on the screen with system information. This is the service mode screen. <p>At the bottom of the screen will be the following message: "Factory Reset Done"</p> <ol style="list-style-type: none"> 9. Please turn the unit off to complete the reset procedure.
T535	Factory Reset	Resets to factory defaults	<ol style="list-style-type: none"> 1. Open tray and then 2. Clear + 2,5,8,0 +Clear 3. Left Arrow and then unplug.
T562	Factory Reset	Resets to factory defaults	Go to SETUP, press "5621", Exit SETUP
	Software Version Check	To check the software version	Press the "STEP UP " button then press"9". The software version will appear on the TV screen.
S570	Factory Reset	Resets to factory defaults	Go to SETUP, press "5701", Exit SETUP
	Software Version Check	To check the software version	Press the "STEP UP " button then press"9". The software version will appear on the TV screen.



FACTORY DEFAULT SETTINGS

Updated December 2020

DVD and BluRay Players

Model	Default Settings	Purpose	Procedure
T571 T572	Factory Reset	Resets to factory defaults	<ol style="list-style-type: none"> 1. Take out any discs from the tray and put unit into STANDBY. 2. Power up unit and wait for the "NO DISC" message on screen. 3. Press the "SETUP" button on the remote. 4. Press the down cursor button on the remote and go to the "TV ASPECT" menu. 5. Press the right cursor button on the remote to select 16:9 (check that the mark is beside the 16:9 should be highlighted at this point) 6. Using the remote control type in the following sequence of buttons, with a 1 second delay between button presses: 1,3,9,7,1,3,9,enter. 7. A blue screen will show up on the screen with system information. This is the service mode screen. At the bottom of the screen will be the following message: "Factory Reset Done" 8. Please turn the unit off to complete the reset procedure.
T557 T567 T577 T587	Factory Reset	Resets to factory defaults	<ol style="list-style-type: none"> 1. Power ON 2. Select "SETUP" in the Home Menu 3. Select "Display", then "TV Aspect Ratio" 4. Select 16:9 5. Enter 1 3 9 7 1 3 9 ENTER (using the T5X7 Remote) 6. A Blue "System Information" Screen will appear. 7. Press Pause (using the T5X7 Remote) 8. The Blue screen will disappear and the Blue NAD logo will appear and "DONE" on the T5X7 VFD. 9. Press Power Off 10. This completes the T5X7 Factory reset.

STEREO RECEIVERS

Model	Default Settings	Purpose	Procedure
C720BEE C725BEE	Factory Reset	Resets to factory defaults	C720BEE Press FM + DISC C725BEE Press Speaker A + Tone Defeat
	Software Version	Displays installed software versions	Press Speaker A + Speaker B



FACTORY DEFAULT SETTINGS

Updated December 2020

A/V RECEIVERS

Model	Default Settings	Purpose	Procedure
T741	Tuner memory reset	Resets all Tuner memory presets	Press TAPE MON. + VIDEO 1
	Factory Reset	Resets to factory defaults	Press VIDEO 1 + TAPE MONITOR = Reset 1 Press VIDEO 2 + TAPE MONITOR = Reset 2
T742	Tuner memory reset	Resets all Tuner memory presets	Press TAPE MON. + DVD
	Factory Reset	Resets to factory defaults	T742 has no Factory Reset Feature
T743 T744	Factory Reset	Resets to factory defaults	Press VIDEO 6 + Source▶
	Software Version	Displays installed software versions	Press VIDEO 6 + TONE CONTROL
T737 T747	Factory Reset	Reset to factory defaults	1. Set to FM FUNCTION STATE 2. Push LISTENING MODE KEY(More than five seconds).
	Software Version	Displays installed software versions	1. Set to AM FUNCTION STATE 2. Push LISTENING MODE KEY(More than five seconds).
T748 T748 V2	Factory Reset	Reset to factory defaults	1. Set to AM FUNCTION STATE 2. Push LISTENING MODE KEY(More than five seconds).
	Software Version	Displays installed software versions	1. Set to FM FUNCTION STATE 2. Push LISTENING MODE KEY(More than five seconds).
T752 T762	Factory Reset	Resets to factory defaults	Press VIDEO + TONE DEFEAT
	Software Version	Displays installed software versions	Press VIDEO + AUDIO



FACTORY DEFAULT SETTINGS

Updated December 2020

A/V RECEIVERS

Model	Default Settings	Purpose	Procedure
T753 T754	Factory Reset	Resets to factory defaults	Press VIDEO 6 + SOURCE▶
	Software Version	Displays installed software versions	Press VIDEO 6 + TONE CONTROL
T163 T763 T773	Factory Reset	Resets to factory defaults	Press VIDEO + TONE DEFEAT
	Software Version	Displays installed software versions	Press VIDEO + AUDIO
T757 T757 V2 T758 T758 V3 T758 V3i	Factory Reset	Reset to factory defaults	Using front panel buttons only, press and hold [SOURCE >], then press and release [MENU] - "Factory Reset..complete." is shown in the front panel display
	Software Version	Displays installed software versions	Press ◀SOURCE + SOURCE▶
T175 T755 T765 T775 T785 T187 T777 T777 V3 T787	Factory Reset	Resets to factory defaults	Using front panel buttons only, press and hold [< SOURCE], then press and release [FRONT INPUT/MP] - "Factory Reset..complete." is shown in the front panel display.
	Software Version	Displays installed software versions	Press ◀SOURCE + SOURCE▶
T 778	System Factory Reset	Resets chassis to factory defaults	From the "Setup Menu", select " System and Upgrade " then " System Factory Reset " to initiate restoring T 778 (except BluOS) to its factory default settings. At System Factory Reset menu, select " Factory Reset " to start factory reset process.
	Software Version	Displays installed software versions	From the " Main Menu ", select " System Info "



FACTORY DEFAULT SETTINGS

Updated December 2020

MASTER SERIES PRODUCTS

Model	Default Settings	Purpose	Procedure
M2	Factory Reset	Resets to factory defaults	Software V1.4: 1. Power ON 2. Press: " coax 1 + menu " for 4 seconds 3. The M2 will go to standby then power back ON Software V1.5: 1. Power ON 2. Press: " balanced + menu " for 4 seconds 3. The M2 will go to standby then power back ON
	Software Version	Displays installed software versions	Software V1.4 Press: " balanced + single-ended " Software V1.5 Press: " coax 1 + coax 2 "
M3 M3e	Factory Reset	Resets to factory defaults	Press RECORD + BALANCE (Hold for 5 Seconds)
	Rename Inputs	Allows Custom Naming of Inputs	Press LISTEN + RECORD (Hold for 5 Seconds)
	Software Version	Displays installed software versions	Press LISTEN + BALANCE (Hold for 5 Seconds)
M5	Factory Reset	Resets to factory defaults	1. Connect the Composite Video output to your Display / TV. 2. Power on the M5, open the drawer and remove any Discs. 3. Press the "SETUP" button on the M5 Remote. 4. Using the M5 Remote, press the "Down" navigation button FOUR Times to highlight the Information (Hand) Tab. 5. Press the "Right" then the "Down" navigation button to highlight the "Restore Setting". 6. Highlight "YES", then type 5501 on the M5 Remote. 7. The setup menu will blank out and come back on in about 5 seconds. 8. After the setup menu reappears, press the "SETUP" button to clear the setup screen. 9. Turn off the M5 using the remote or front power button. 10. Now hard power off the M5 from the rear panel switch. 11. Leave The M5 Off For More Than 1 minute before powering back on.



FACTORY DEFAULT SETTINGS

Updated December 2020

MASTER SERIES PRODUCTS

Model	Default Settings	Purpose	Procedure
M10	Factory Reset	Resets to factory defaults	<p>1. Via Front Panel Display Go to Settings - Other menu option and select Factory Reset to initiate restoring of the M10 to factory default settings. Follow the prompt commands.</p> <p>2. Force Factory Reset</p> <p>A) Disconnect the mains power plug from the mains power outlet. B) Press and hold rear panel Standby button and while doing so reconnect the mains power plug to the mains power outlet. Do not release the Standby button. C) After about 30 seconds of holding down the Standby button, the NAD logo indicator blinks red. D) Release the Standby button as soon as the NAD logo indicator blinks red. E) Successful Factory Reset is indicated by the unit rebooting. - For wireless connection, M10 returns to Hotspot mode and NAD logo indicator turns into solid white. - For wired connection, M10 will simply connect as if it was a new player and NAD logo indicator turns into solid white.</p> <p>IMPORTANT Releasing the Standby button switch at any time before the NAD logo indicator begins flashing red will cancel the factory reset and leave the M10 at Upgrade Mode. Just start again the procedure for Factory Reset.</p>
	Software Version	Displays installed BluOS Version	Open the BluOS Controller App. Select M10 under "My Players". Select " Help " and then " About "
M12	Factory Reset	Resets to factory defaults	<p>1. Press and hold front panel's "Main" display. 2. Select "Factory Reset" and then "Yes" to start the Factory Reset. 3. Factory reset is complete when the M12 goes to standby mode.</p> <p>IMPORTANT NOTE After factory reset, wait out for at least one minute to switch back the M12 from standby mode to operating mode.</p>
	Software Version	Displays installed software versions	<p>1. Press and hold front panel's "Main" display 2. Select "Setup" display option</p>



FACTORY DEFAULT SETTINGS

Updated December 2020

MASTER SERIES PRODUCTS

Model	Default Settings	Purpose	Procedure
M15	Factory Reset	Resets to factory defaults	Press AUDIO + DIGITAL
	Software Version	Displays installed software versions	Press AUDIO + VIDEO
M15 HD M15 HD2	Factory Reset	Resets to factory defaults	Press ◀SOURCE + Tone Defeat
	Software Version	Displays installed software versions	Press ◀SOURCE + SOURCE▶
M17 M17 V2 M17 V2i	Processor Reset	Resets to factory defaults	<ol style="list-style-type: none"> 1. Press and hold front panel's "Main" display. 2. Select "Setup" display option. 3. Select "Factory Reset" display option. 4. Select between "Yes (NTSC)" or "Yes (PAL)" to select video mode after Factory Reset. Select "No" if you decide not to reset your M17. <p>4. Factory reset is complete when the M17 goes to standby mode.</p> <p>IMPORTANT NOTE After factory reset, wait out for at least one minute to switch back ON the M17 from standby mode to operating mode.</p>
	Software Version	Displays installed software versions	<ol style="list-style-type: none"> 1. Press and hold front panel's "Main" display 2. Select "Setup" display option
M32	Processor Reset	Resets to factory defaults	<ol style="list-style-type: none"> 1. Press and hold front panel's "Main" display. 2. Select "Factory Reset" display option. 3. Select "Yes" to reset your M32 to factory default settings or "No" if you decide not to reset your M32. 4. Factory reset is complete when the M32 goes to standby mode. <p>IMPORTANT NOTE After factory reset, wait out for at least one minute to switch back ON the M32 from standby mode to operating mode.</p>
	Software Version	Displays installed software versions	<ol style="list-style-type: none"> 1. At any Source, press and hold "Main" in the front panel screen display until the next display appears. 2 Applicable MCU, LCD, Audio,USB or HDMI firmware version details are shown.



FACTORY DEFAULT SETTINGS

Updated December 2020

MASTER SERIES PRODUCTS

<u>Model</u>	<u>Default Settings</u>	<u>Purpose</u>	<u>Procedure</u>
M33	Factory Reset	Resets to factory defaults	<p>1. Via Front Panel Display Go to Settings - Other menu option and select Factory Reset to initiate restoring of the M33 to factory default settings. Follow the prompt commands.</p> <p>2. Force Factory Reset A) Press and hold rear panel RESET tact switch and while doing so, turn ON the rear panel POWER switch. Do not release hold of the RESET tact switch. B) Hold down the RESET tact switch - STATUS INDICATOR (NAD logo) alternately blinks red and white. C) Release the RESET tact switch as soon as the front panel display shows "Factory Reset..." D) Successful Factory Reset is indicated by the unit rebooting. - For wireless connection, M33 returns to Hotspot mode and STATUS INDICATOR (NAD logo) indicator turns into solid white. - For wired connection, M33 will simply connect as if it was a new player and NAD logo indicator turns into solid white.</p> <p>IMPORTANT Releasing the Standby button switch at any time before the STATUS INDICATOR (NAD logo) begins flashing red will cancel the factory reset and leave the M33 at Upgrade Mode. Just start again the procedure for Factory Reset.</p>
	Software Version	Displays installed BluOS Version	Open the BluOS Controller App. Select M33 under "My Players". Select " Help " and then " About " The iOS App and BluOS versions will be displayed.
M50	Factory Reset	Resets to factory defaults	<ol style="list-style-type: none"> 1. Press the front panel "menu" button. 2. Press the "◀◀ skip" six times to access "Factory Reset", then "scan ▶▶" 3. Press the "◀◀ skip" to select "Factory Reset - Yes" 4. Press the ENTER button of the navigation dial. "Doing Factory Reset" will display.
	Software Version	Displays installed software versions	Open the BluOS Controller App. Select M50 under "My Players". Select " Help " and then " About " The iOS App and BluOS versions will be displayed.



FACTORY DEFAULT SETTINGS

Updated December 2020

MASTER SERIES PRODUCTS

Model	Default Settings	Purpose	Procedure
M50.2	Factory Reset	Resets to factory defaults	<ol style="list-style-type: none">1. Touch the 3 horizontal bars in the upper left of the touchscreen.2. Touch "Settings" then "Factory Reset"3. When the Factory Reset confirmation screen appears, select "Yes" or "Cancel" to exit.4. When the factory reset completes the Front Panel will display "Now Playing"
	Software Version	Displays installed software versions	<ol style="list-style-type: none">1. Open the BluOS Controller App. and select the your M50.2 in "My Players"2. Select "Help" then "About"3. The iOS App and BluOS versions will be displayed.
M51	Factory Reset & Software Versions	Resets to factory defaults & displays installed software	<ol style="list-style-type: none">1. Press and hold front panel [INPUT] button.2. Set to ON the rear panel POWER switch while still holding on to [INPUT] button.3. VFD illuminates. Release [INPUT] button. VFD will show SETUP VFD TEST V1.xx RESET "VFD TEST" is flashing. V1.xx stands for the software version.4. Within 3 seconds, press front panel Standby button and "RESET" will now flash.5. M51 will go to reset mode with the VFD showing "Factory Reset". The M51 is now reset and will automatically shut down.



FACTORY DEFAULT SETTINGS

Updated December 2020

MASTER SERIES PRODUCTS

<u>Model</u>	<u>Default Settings</u>	<u>Purpose</u>	<u>Procedure</u>
M55	Factory Reset	Resets to factory defaults	<ol style="list-style-type: none">1.Connect the M55 composite output to a display to view the OSD.2.Power on the M55, and remove any Discs.3.Press the "SETUP" button on the M55 Remote.4.Press the "Up" navigation button ONCE on the M55 Remote to highlight the Information (Hand) Tab.5.Press the "Right" then the "Down" navigation button to highlight the "Restore Setting".6.Choose "YES" then press "ENTER".7.Using the M55 Remote, type in 5 5 0 1 into the password field.8.After the AH Reset notice clears, power the M55 off from the rear panel power switch.9.Power on the M5510.Press the "SETUP" button on the M55 Remote and navigate to the Information Tab and the Restore Setting.11.Choose "YES" then press "ENTER".12.Using the M55 Remote, type in "3 3 0 8" then "ENTER"13.Wait 5 Seconds.14.This completes the reset procedure.
M56	Factory Reset	Resets to factory defaults	<ol style="list-style-type: none">1. Power ON2. Select "SETUP" in the Home Menu3. Select "Display", then "TV Aspect Ratio"4. Select 16:95. Enter 1 3 9 7 1 3 9 ENTER (using the M56 Remote)6. A Blue "System Information" Screen will appear.7. Press Pause (using the M56 Remote)8. The Blue screen will disappear and the Blue NAD logo will appear and "DONE" on the M56 VFD.9. Press Power Off10. This completes the M56 Factory reset.



FACTORY DEFAULT SETTINGS

Updated December 2020

DIGITAL MUSIC PRODUCTS

Model	Default Settings	Purpose	Procedure
C328	Factory Reset	Resets to factory defaults	Press and hold the front panel's SOURCE > buttons until the screen display shows " C3 ". Release SOURCE > button to complete the factory reset.
	Software Version	Displays current Software Version	Press < SOURCE for more than 3 seconds
C338	Factory Reset	Resets to factory defaults	Press and hold the front panel's SOURCE > buttons until the screen display shows " C3 ". Release SOURCE > button to complete the factory reset.
	Software Version	Displays current Software Version	Press < SOURCE for more than 3 seconds
C368 C388 C658	Factory Reset	Resets to factory defaults	Press < SOURCE + SOURCE > until " FACTORY RESET " displays
	Software Version	Displays current Software Version	<ol style="list-style-type: none"> 1. Navigate through the menu options using the front panel buttons or corresponding SR 9 buttons to select "Settings" 2. Press [ENTER] to select a menu item. 3. Press V repeatedly to the "Fimrware Versions" page.
C390DD	Factory Reset	Reset to factory defaults	Press < SOURCE + SOURCE > (more than 5 seconds)
	Software Version	Displays installed software versions	Press the Center Button of the Navigatin Dial for 5 seconds
C446	Factory Reset	Resets to factory defaults	Press ◀SOURCE + BACK "AH Reset... Complete" follwed by an orange Standby LED Press SOURCE▶ + SETUP "C Reset... Complete" follwed by an orange Standby LED
	Software Version	Displays current Software Version	<ol style="list-style-type: none"> 1. Press "SETUP". The "Settings Menu" will be displayed. 2. Scroll down to "System Info", then press ENTER to display SW Versions.



FACTORY DEFAULT SETTINGS

Updated December 2020

DIGITAL MUSIC PRODUCTS

Model	Default Settings	Purpose	Procedure
C510	Factory Reset & Software Versions	Resets to factory defaults & displays installed software	<ol style="list-style-type: none"> 1. Press and hold front panel [>] button. 2. Set to ON the rear panel POWER switch while still holding on to [>] button. 3. VFD illuminates. Release [>] button. VFD will show: SETUP VFD TEST V1.xx RESET "VFD TEST" is flashing. V1.xx stands for the software version. 4. Within 3 seconds, press front panel Standby button and "RESET" will now flash. 5. The C510 will go to reset mode with the VFD showing "Factory Reset". The C510 is now reset and will automatically shut down.
D1050	Factory Reset	Resets to factory defaults	Press and hold " SERVICE " at the rear panel until D1050 defaults to OPT1 source.
	Software Version	Displays current Software Version	<ol style="list-style-type: none"> 1. With the D1050 powered ON, press and hold "ON" button of the remote control until the display starts to flash. Release the "ON" button and observe the display sequence. 2. The number of times the left column flashes, indicates the 1st digit of the firmware version. 3. The number of times the right column flashes, indicates the the 2nd digit of the firmware version to the right of the decimal point.
D3020 D3020 V2	Factory Reset	Resets to factory defaults	Press and hold " BASS EQ " at the rear panel until D3020 defaults to COAX source.
	Software Version	Displays current Software Version	<ol style="list-style-type: none"> 1. With the D3020 powered ON, press and hold "ON" button of the remote control until the display starts to flash. Release the "ON" button and observe the display sequence. 2. The number of times the left column flashes, indicates the 1st digit of the firmware version. 3. The number of times the right column flashes, indicates the the 2nd digit of the firmware version to the right of the decimal point.



FACTORY DEFAULT SETTINGS

Updated December 2020

DIGITAL MUSIC PRODUCTS

Model	Default Settings	Purpose	Procedure
D 3045	Factory Reset		With the unit at operating mode, press and hold [DIM] button of AMP 3 remote control until " Reset " appears in the display and Source defaults to OPTICAL 1.
	Software Version	Displays current Software Version	With the unit at operating mode, press and hold [ON] button of AMP 3 remote control until the display shows the MAIN and BT (Bluetooth) software version details.
D7050	Factory Reset	Resets to factory defaults	Press and hold " RESET " at the rear panel until the D7050 the unit displays " RESET "
	Software Version	Displays current Software Version	D7050 firmware version is displayed in the "NAD Remote App" on the "Device Info"
VISO 1	Factory Reset	Resets to factory defaults	<ol style="list-style-type: none"> 1. Press and hold "+" and then press POWER button to turn ON the VISO 1. 2. Release "+" when the POWER indicator turns blue and flashes three times. 3. VISO 1 will continue on to initialize.
	Software Version	Displays current Software Version	With a docked iPod, the current software details can be viewed by going to Settings-General>About-VISO 1(steps may vary).
VISO 1 AP	Factory Reset	Resets to factory defaults	<ol style="list-style-type: none"> 1. Disconnect and then reconnect your VISO 1 AP to the mains power source. As soon as "S" (in green) begins to flash, press and hold "-" until the "S" indicator turns off. Release "-". 2. VISO 1 AP will continue to initialize. 3. The "S" indicator will then alternately switch to green and red light after initializing. This indicates that the VISO 1 AP is ready to be configured again.
	Software Version	Displays current Software Version	<ol style="list-style-type: none"> 1. Connect your VISO 1 AP to the same network as your PC. After successful connection, check the IP address of your VISO 1 AP with WiFi scanner app. 2. Open your web browser and enter the IP address of your VISO 1 AP. 3 Select "Firmware Update" ; the Current Firmware will be displayed.
VISO 1 BT	Amplifier Reset	Resets to factory defaults	<ol style="list-style-type: none"> 1 Press and hold "+" and then press ON/OFF button to turn ON the VISO 1 BT. 2 Release "+" when the POWER indicator turns blue and flash three times. 3 VISO 1 BT will continue on to initialize.